DIRECTION OF ROTATION




ALWAYS ADHERE TO THE TYRE FITTING GUIDE TO MAINTAIN THE INTEGRITY OF THE TREAD JOINT. FAILURE TO DO SO MAY RESULT IN A DEFECT.


FOUR WHEEL DRIVE




FRONT WHEEL DRIVE

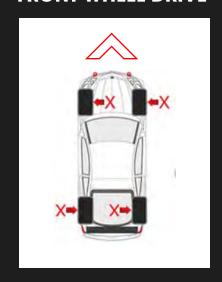

REAR WHEEL DRIVE

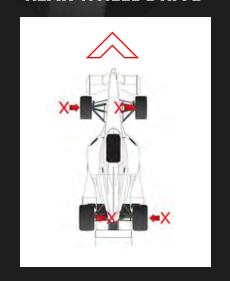

SIDECAR

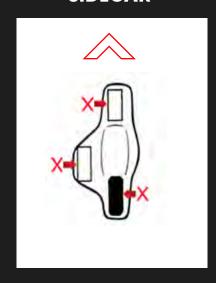



= SPECIFICATION NUMBER (Located on one sidewall of each tyre)