



DIRECTION OF ROTATION


ALWAYS ADHERE TO THE TYRE FITTING GUIDE TO MAINTAIN THE INTEGRITY OF THE TREAD JOINT. FAILURE TO DO SO MAY RESULT IN A DEFECT.

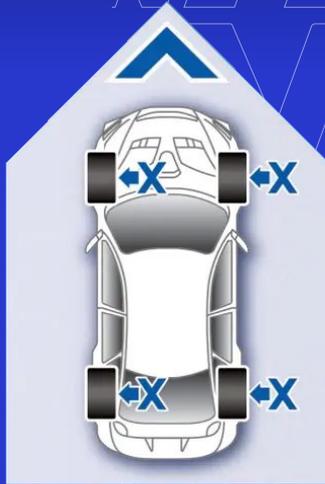

FOUR WHEEL DRIVE

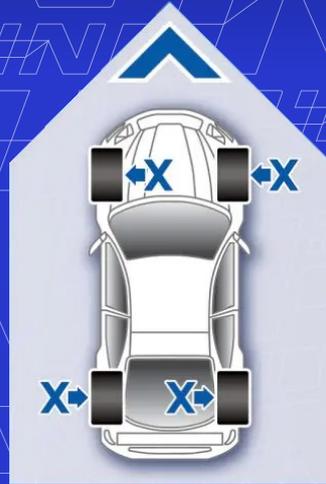

FRONT WHEEL DRIVE

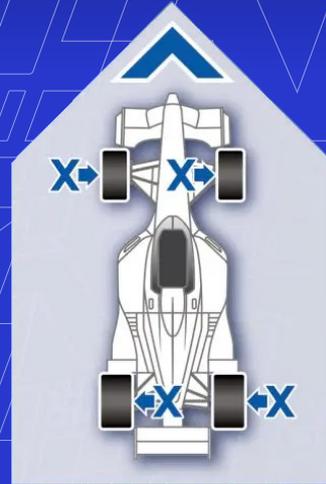

REAR WHEEL DRIVE



SIDECAR

KEY X Tyre specification is located on one sidewall of each tyre. Ensure correct fitting as above.